


The ultimate lead replacement system

easy-trim Lead R

Installation

- Ensure all surfaces to receive the Easy-Trim Lead R are clean, dry and free of any contamination.
- All laps should be 75mm min, with pressure applied using a roller.
- Fold Easy-Trim Lead R into the brickwork joints or 25mm chase cut into the upstand, where it's not possible to do this, apply Easy-Trim Lead S sealant along the top edges to ensure the installation is watertight, with a cover flashing.
- Easy-Trim Lead R can easily be cut with a snap off knife or scissors.
- Cover slates at top edge abutments by 150mm and carefully adhere up the wall by 75mm.
- On mansard roofs, install Easy-Trim Lead R with 150mm overlap over lower roof slates. Mechanically fix a lay board and fillet to the upper roof along the eaves, and carefully apply the Easy-Trim Lead R to the lay board and fillet.
- Remove and make good all unstable surface to receive the Easy-Trim lead R. Where necessary apply Easy-Trim Bitumen primer to prepare surface.
- Further fixing guides are available on our website.

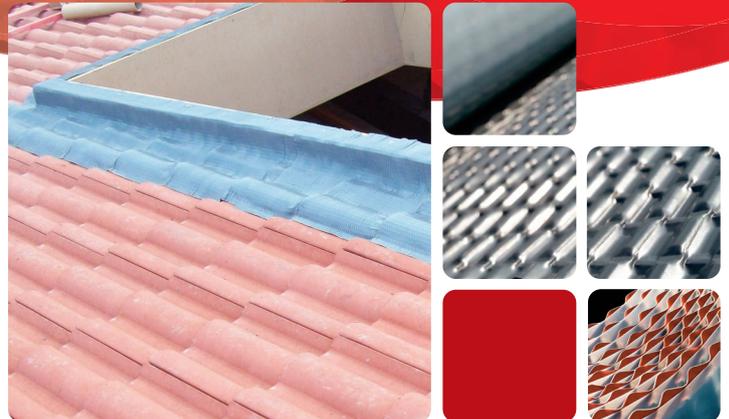

LEADRQUIDE001/29/10/15

**BBA
Certified**



Key features to Easy-Trim Lead R and Easy-Trim Lead R Smooth

- Zero re-sale value - theft and vandalism are eliminated.
- Waterproof
- Malleable
- Easily cut
- Extremely lightweight
- Cost effective alternative to traditional lead
- Durable
- Easy to install
- Easily repaired

Typical Application

- Abutments
- Dormers
- Soakers
- Valleys
- Valleys and gutters
- Chimneys
- Saddles
- Stepped
- Windows and rooflights



Scan for more detailed technical documents

Tel: +44 (0) 845 034 6008

e: enquiries@easy-trim.co.uk

f: +44 (0) 845 034 6010

Unit 12B Metcalf Drive
Altham Industrial Estate | Altham
Lancashire | BB5 5TU | England
w: www.easy-trim.co.uk



find us:

the signature of assurance
easy-trim 
Roofing & Construction Products